


Sierra Series Workcenters Special Settings

Before continuing, initialize legs if you have not done so already

After all the legs and the switch are connected *and* the power cord has been plugged in, hold the **down** arrow on the switch until the legs make a short motion down and then back up. This initializes and synchronizes the table legs.

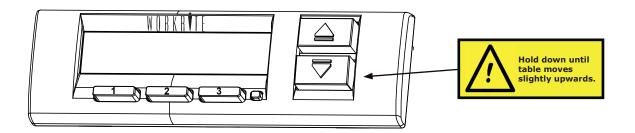




Change display from inches to centimeters

- Simultaneously press 1 & 2 and the Up or Down Arrow until the readout changes to show S5.
- Press the "SET" button with a ballpoint pen (NOT paperclip) to change from inches to centimeters.

 To return to inches, repeat the same process.

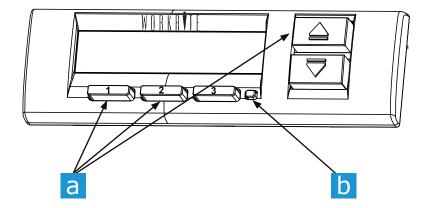

Adjust Starting Digital Height Readout

(If you have a worksurface that is not 11/8" thick, causing the lowest height readout to be incorrect)

- Lower the table to the lowest position and measure the height from the floor to the top of the worksurface. (not shown)
- b Press the "SET" button with a ballpoint pen (NOT paperclip).
- C Press and hold "Down" button until display flashes.
- d Press "Up" or "Down" button until display shows actual height for the worksurface.
- e Press the "SET" button with a ballpoint pen (NOT paperclip).

Note: Height readout must be readjusted separately for inches and centimeters.


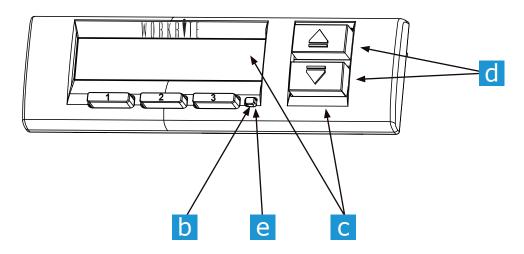


Table Locking Feature

- To Lock:
 - Press and hold the "SET" button with a ballpoint pen until the control box clicks two times The table will now be locked and will not move when any buttons are pushed. A padlock icon will appear on the display when the table is locked.
- To Unlock:
 Press 1, then 2 and then 3 to unlock. *The default unlock code is always 1-2-3.

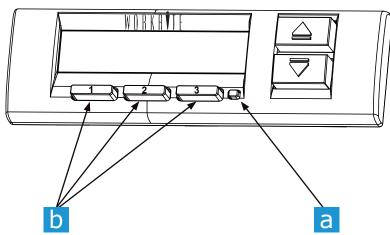

Set Custom Height Limits

You can set custom limits for both the upper and lower height range.

A custom upper height limit must be higher than 35" and the custom lower height range must be below 35".

You can set just an upper or lower custom height limit - it is not necessary to set both an upper and a lower height limit.

To set or delete a new lower limit:

- Move to the desired lower limit anywhere lower than 35 inches
- Press the following buttons at the same time for about 4 seconds: Button 1, Button 2 and the Up Arrow
- If the code "S 4" appears release all Buttons and then press Button 1 to set this custom lower limit or Button 2 to delete this custom lower limit OR

If any other code appears in the display, release the buttons and then press either the Up or the Down button until the display reads "S 4" and then press Button 1 to set this custom lower limit or Button 2 to delete this custom lower limit

To set or delete a new upper limit:

- Move to the desired upper limit anywhere higher than 35 inches
- Press the following buttons at the same time for about 4 seconds: Button 1, Button 2 and the Up Arrow
- If the code "S 4" appears release all Buttons and then press Button 1 to set this custom upper limit or Button 2 to delete this custom upper limit OR

If any other code appears in the display, release the buttons and then press either the Up or the Down button until the display reads "S 4" and then press Button 1 to set this custom upper limit or Button 2 to delete this custom upper limit

